


CUP WARM EQUIPMENT

USER MANUAL

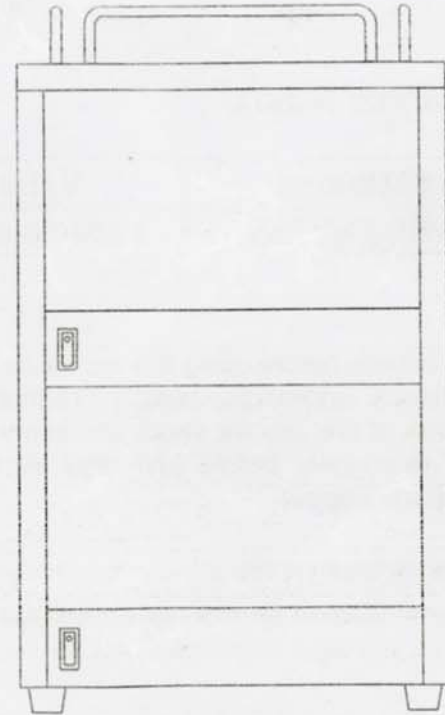


PRODUCT: CW-N Coffeetech Cup Heater
THE PRODUCER : JOMA ELECTRICAL CO.,
LIMITED ROOM 905, WORKINGBERG
COMMERCIAL BUILDING, 41-47, MARBEL
ROAD, HONGKONG
IMPORTER : BEST ITHALAT IHRACAT PAZ. VE
TIC. A.S. BOGAZICI CAD. TASOCAGI YOLU SOK.
NO: 37 34810 CUBUKLU BEYKOZ ISTANBUL
TURKEY
TEL: 00-90-216-3314791
FAX: 00-90-216-3314795

Cup warmer user manual

MS-09E Series products

- 1- Switch
- 2- Power socket

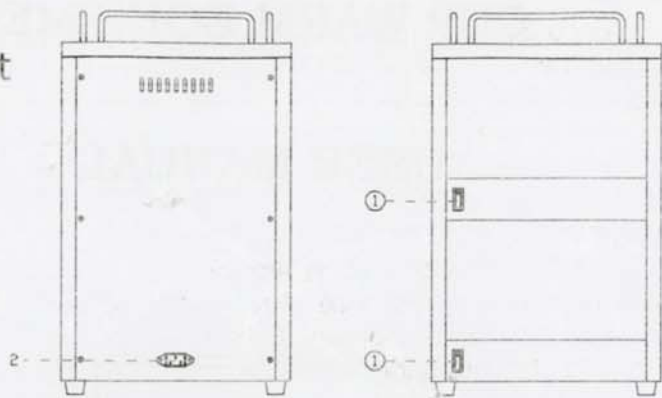

Temperature range: ~ 60°C

MODEL	SIZE(mm)	V/Hz	W
MS-09E	320*320*555	230V/50-60HZ	140

INTRODUCTION

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

ELECTRICAL REQUIREMENTS

Plug warmer into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the warmer for voltage and wattage requirements.

SAFETY INSTRUCTIONS

1. Warning! All power must be disconnected at power source before any service procedure is performed.

2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.

3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.

4. Always unplug appliance when not in use and before cleaning, adjusting or maintaining this machine. To disconnect appliance, turn switch off and remove plug from power source.

5. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.

6. Do not use outdoors. This appliance is not intended for wet or moist locations. Never locate appliance where it may fall into water.

7. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not create a trip hazard.

8. This appliance is equipped with a power cord with a three-blade plug. Plug ONLY into a matching three-blade outlet. DO NOT cut or break off the third blade or attempt to use with a two-blade extension cord.

9. To prevent a possible fire, it is recommended that the unit is placed on a non-combustible surface.

10. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

OPERATION

1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.

2. Turn unit off when not in use.

3. To disconnect appliance, turn switch off and remove plug from power source.

CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.

Unplug the cord and let warmer cool before cleaning or moving.

this unit can be cleaned with a damp sponge and mild soap. Rinse with clean water and wipe dry. Do not immerse in water or other liquid. Do not clean with a water jet.